

GDP866PB

GDP869PB

EN User Manual | **Cooker Hood**



Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, trouble shooter, service and repair information:
www.aeg.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION AND INSTALLATION.....	2
2. PRODUCT DESCRIPTION.....	2
3. DAILY USE.....	3
4. CARE AND CLEANING.....	5
5. ENVIRONMENTAL CONCERNS.....	6

 
1. SAFETY INFORMATION AND INSTALLATION

WARNING!

Refer to the separate Installation Instructions booklet for Safety Information and Installation. Read carefully the Safety chapters before any use or maintenance of the appliance.

2. PRODUCT DESCRIPTION

2.1 Control panel overview

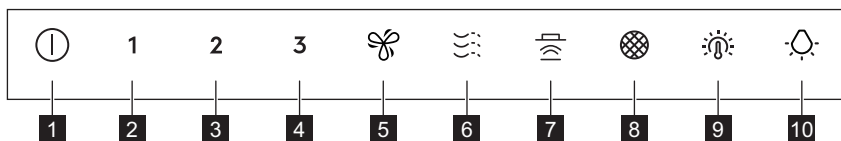



Function	Description
1 On / Off	Turns the hood on and off.
2 First speed	The fan switches to first speed level.
3 Second speed	The fan switches to second speed level.
4 Third speed	The fan switches to third speed level.
5 Maximum speed	The fan switches to maximum speed level. After 8 minutes the appliance returns to previous setting.

Function	Description
6 Breeze	The hood operates on the lowest speed. After 60 minutes the appliance turns off.
7 Hob²Hood	Indicator of the function to control hood from hob.
8 Filter notification	Reminds to change or clean the charcoal filter and clean the grease filter.
9 Light colour temperature	Changes the light colour temperature.
10 Lamp	Turns the lights on and off. Changes the light intensity.

3. DAILY USE

3.1 Using the hood

Check the recommended speed according to the table below.

1	While heating up food, cooking with covered pots.
2	While cooking with covered pots on multiple cooking zones or burners, gentle frying.
3	While boiling and frying big quantities of food without a lid, cooking on multiple cooking zones or burners.
	While boiling and frying big quantities of food without a lid, big humidity.
	Refreshes the air in kitchen after cooking at a very low noise level. The function turns off automatically after 60 minutes. Use after cooking only.



It is recommended to leave the hood operating for approximately 15 minutes before and after cooking.

Activating the appliance


To operate the hood:

1. Pull out the drawer of the hood to switch on the control panel.


You can now activate the functions.

2. To activate the function, touch the corresponding symbol.



If the fan speed is not set within one minute after switching on the hood, the control panel will deactivate. To activate it again, touch the  symbol.

Deactivating the appliance

To turn off the appliance touch  symbol again or close the hood drawer.





When the drawer is closed, the last fan speed setting will be saved. When the drawer is pulled out again, the hood will operate at the last selected fan speed.


Perfect Illumination - Lighting



The hood lighting works independently to other hood functions.

Activating and deactivating the lighting

To illuminate the cooking surface touch the  symbol. Touch the  symbol again to change the light intensity in the following order: Maximum, Medium, Low, Off.

To switch off the lights, touch and hold the  symbol for 3 seconds. Closing the drawer has no effect on the hood light.

Setting the light colour temperature



The hood remembers the last setting of the light colour temperature.

There are two ways to set the light colour temperature:

1. Touch the symbol to change the colour temperature from neutral, through warm to cold.
2. Touch and hold the symbol to move smoothly between light colour temperatures. Release it once you reach the desired setting.

3.2 Hob²Hood function

It is an automatic function which connects the hob with a hood. Both the hob and the hood have an infrared signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan using the hob manually. The function can be activated from panel of the hob.



If the hood drawer is closed, the Hob²Hood will only activate the hood light. The fan will remain off. If the drawer is open, the function will activate both the hood light and the fan.



For more information how to use the function, refer to the hob user manual.

3.3 Filter notification

Filter alarm reminds to change or clean the charcoal filter and clean the grease filter. The

symbol blinks regularly for 30 seconds if the grease filter must be cleaned. The symbol blinks twice per every second for 30 seconds if the charcoal filter must be replaced.



This function activates independently after 40 hours of operation for grease filter and 160 hours of operation for charcoal filter.



Refer to Cleaning the grease filter in the Care and cleaning chapter.



Refer to Replacing the charcoal filter in the Care and cleaning chapter.



The function counter for charcoal filter is disabled by default. For recirculation mode, it must be activated.

To activate or deactivate the counter for charcoal filter:

1. Pull out the hood drawer.
2. Make sure the fan and the light are turned off.
3. Touch **2** symbol for 3 seconds.

The function is activated if symbol blinks once. The function is deactivated if symbol blinks twice.

To reset the function counter in the notification period:

1. Pull out the hood drawer.
2. Touch symbol for 3 seconds. The symbol stops blinking for the correct reset.

4. CARE AND CLEANING

4.1 Notes on cleaning



 
Cleaning Agents

Do not use abrasive detergents and brushes.

Clean the surface of the appliance with a soft cloth with warm water and a mild detergent.

After cooking some parts of appliance can get hot. To avoid stains appliance must be cooled down and dried with clean cloth or paper towels.

Clean stains with a mild detergent.



Keep the hood clean

Clean the appliance and grease filters each month. Clean the interior and grease filters carefully from fat. Fat accumulation or other residue may cause fire.

Grease filters can be washed in a dishwasher.

The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.



Charcoal filter

The time of saturation of the charcoal filter varies depending on the type of cooking and the regularity of cleaning the grease filter. The activated charcoal filter is not washable, cannot be regenerated and must be replaced approximately every 4/6 months of operation, or more frequently for particularly heavy usage.



 
Before carrying out any maintenance, make sure there is no cookware on the hob and that the hood and the hob are disconnected from the power supply.

4.2 Cleaning the grease filter


Filters are mounted with the use of clips and pins on the opposite side.

To clean the filter:

1. Pull the cover to open it.

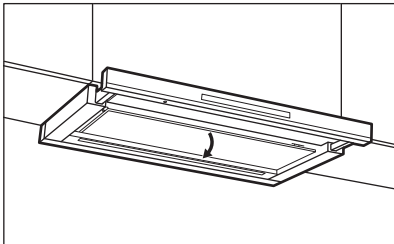

 2. Pull the handle on the filter underneath the hood and slightly tilt the front of the filter down.

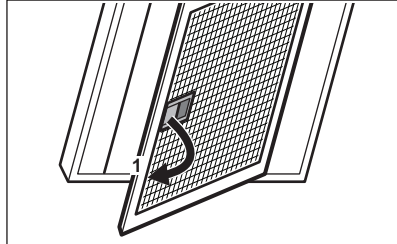

3. Clean the filters using a sponge with non abrasive detergents or in a dishwasher.



The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.

4. To mount the filters back follow the first two steps in reverse order. Repeat the steps for all filters if applicable.

4.3 Replacing the charcoal filter

⚠ WARNING!

 
The charcoal filter is non-washable!

To replace the filter:

1. Remove the grease filters from the appliance.

Refer to "Cleaning the grease filter" in this chapter.

2. Pull the tabs towards the bottom part of the filter.

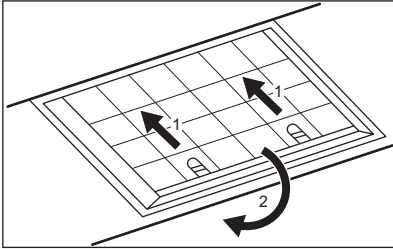



3. Slightly tilt the front of the filter downwards, then pull.
4. To install a new filter, refer to the separate Installation Instructions booklet. In any case, it is necessary to replace the filters at least every four months.

4.4 Replacing the lamp

This appliance is supplied with a LED lamp and separate control gear (LED driver). These parts can be replaced by a technician only. In case of any malfunction refer to "Service" in the "Safety Instructions" chapter.

5. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



aeg.com

867382564-A-012024



UK
CA CE